



# PIANO

by Patrick Séha

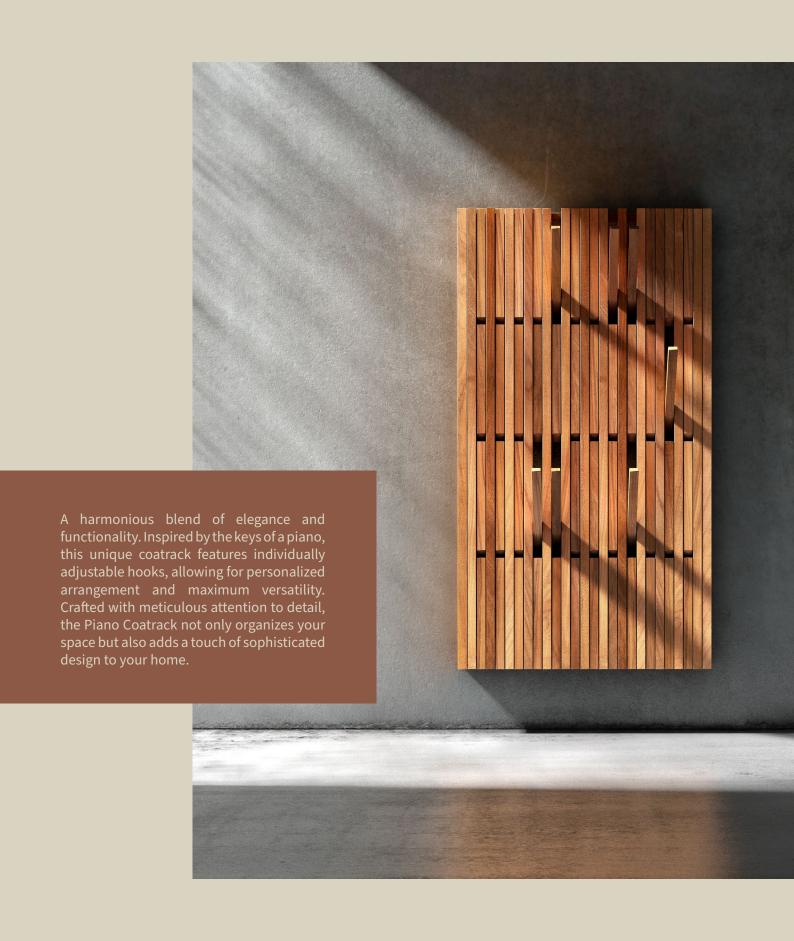


## SIZES

#### LARGE

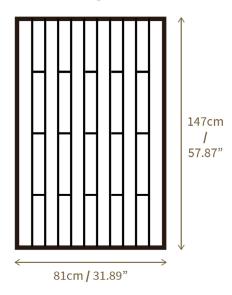

#### **SMALL**

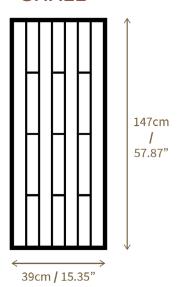

## **COLORS**

#### **INDOOR**







walnut



oak natural olied



ash



beech white

#### OUTDOOR



teak

# **VARIATIONS**



## **TECHNICAL**

The flexible hooks of the Piano can be opened or closed over the whole width of the Piano, at four different heights. When not in use, all hooks (20 for the Small / 48 for the Large) can be closed, giving the Piano a very elegant look and space-saving features.

#### **TIGHTENING THE HOOKS**



Carefully take off the side by giving it a few taps at the bottom.



Slide the side upwards and take it off.




Put the side aside for a moment.



You can tighten the hooks (per level) with a spanner.



If you are happy with how the hooks open now, you can put the side back on.

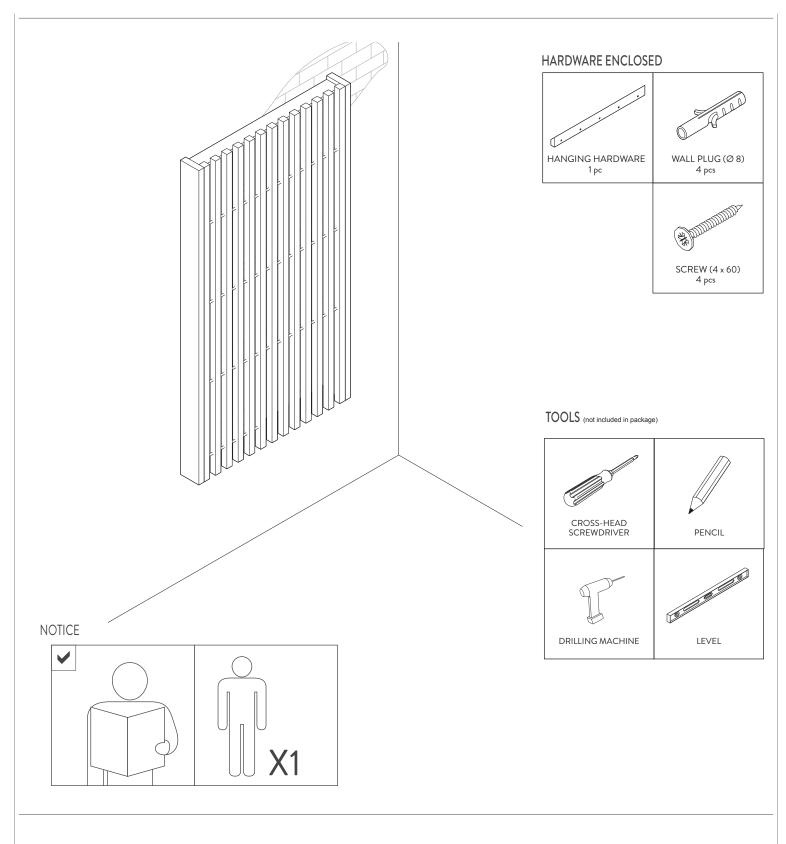

**SYMBOLS** 



DIRECTION











USE SCREWDRIVER TO TIGHTEN



USE PENCIL

## A DETERMINE THE LINE

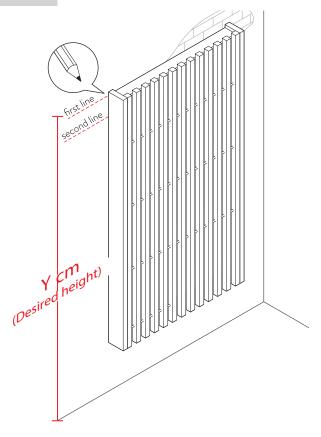

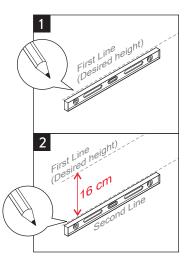



## **USE LEVEL FOR ALIGNMENT**

#### FOR EXAMPLE


If you want to hang the Piano with the top (first line) at a height of 195 cm, the bottom of the beam (second line) should be placed at (195 - 16\* =) 179 cm.

## B INSTALLING HANGING HARDWARE

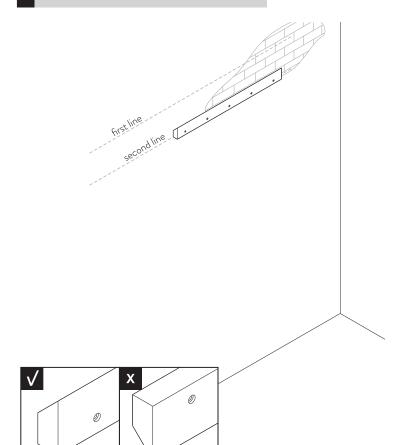

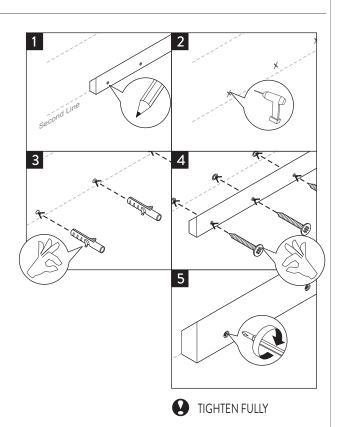

# C HANGING RACK TO THE HANGING HARDWARE

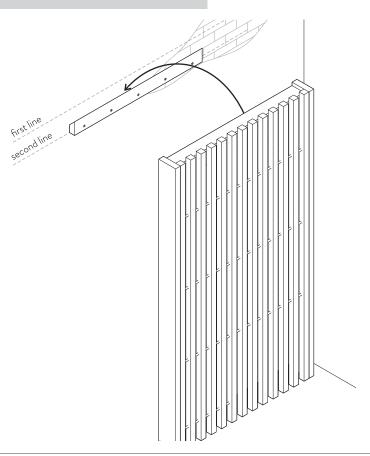

# D FINISH

